



de Montageanleitung
en Mounting instructions
fr Instructions de montage
sv Monteringsinstruktion
nl Montagehandleiding
it Istruzioni di montaggio
fi Asennusohje
es Instrucciones de montaje
da Monteringsvejledning
pl Instrukcja montażu
cz Montážní návod
hu Szerelési útmutató
el Οδηγίες εγκατάστασης
tr Montaj talimatları
zh 安裝指導

Aufbausatz
Mounting kit
Kit de montage
Monteringsatts
Opbouwset
Accoppiamento
Asennussarja
Equipo de montaje
Montasjesats
Zestaw montażowy
Montážní sada
Összeépítő készlet
Μοχλισμός εγκατάστασης
Montaj kiti
安裝套件




ASK31

SQL33..., SQL83...
VBF... DN 65...150

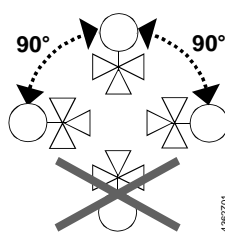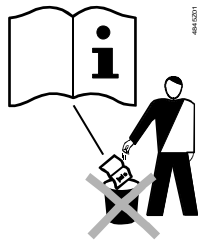


1 SQL33...
SQL83...









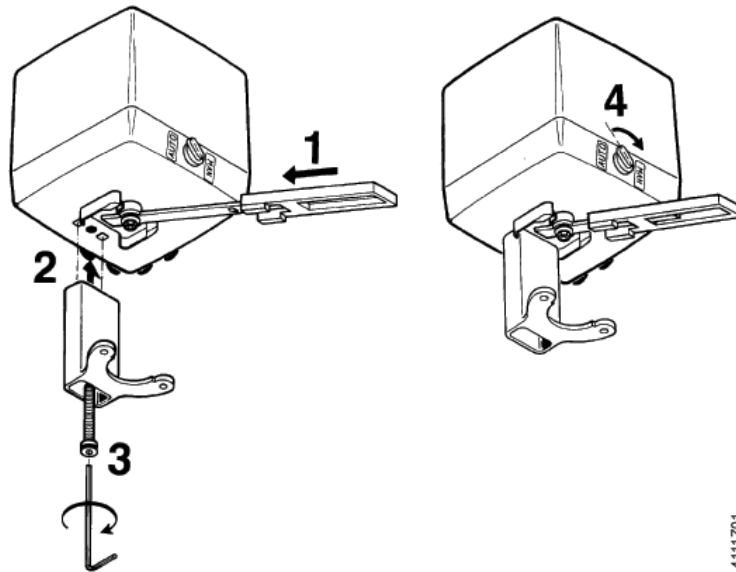


4111Z01

2 VBF... DN 65...150

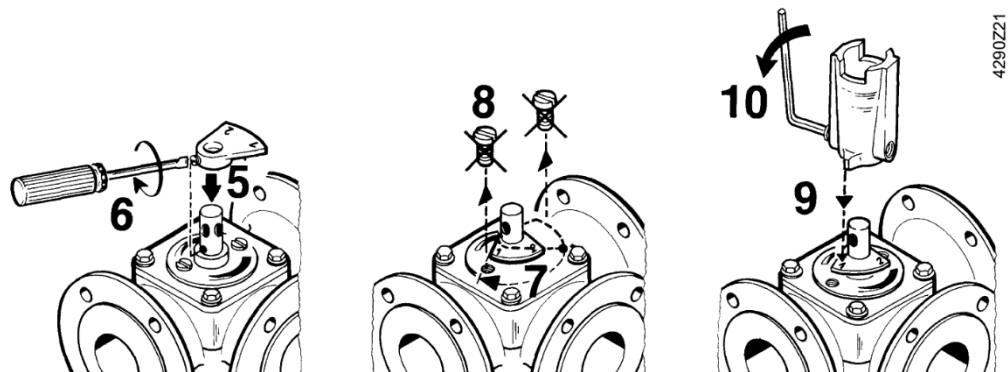

4290Z21

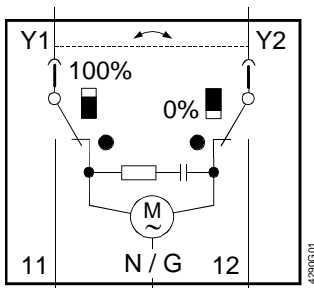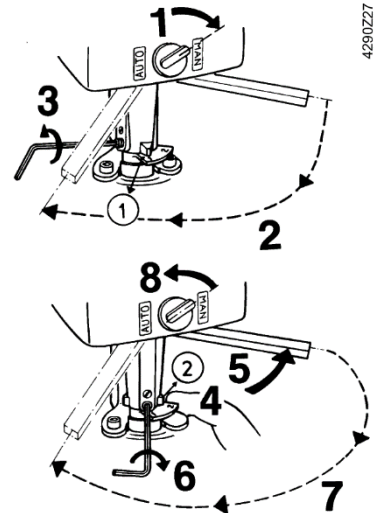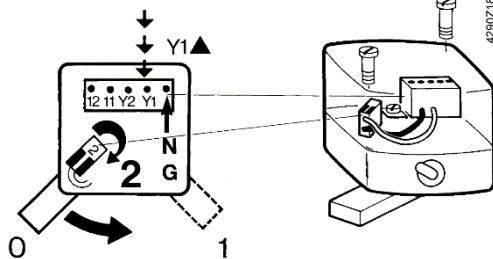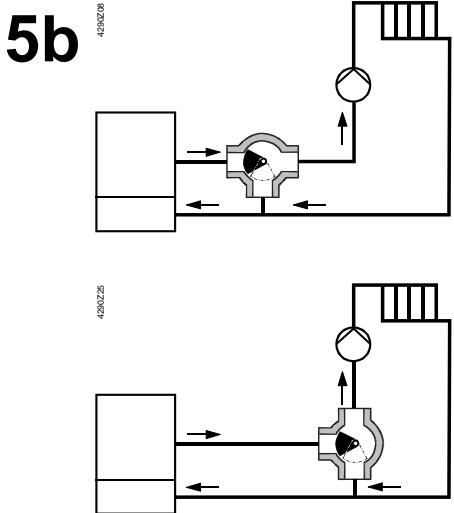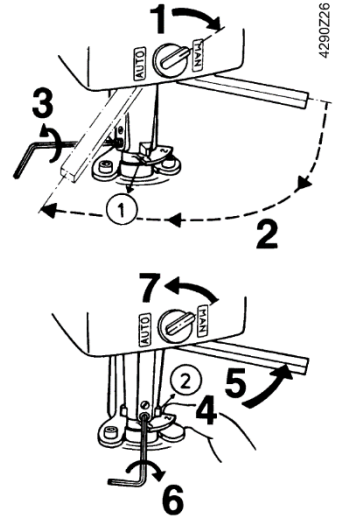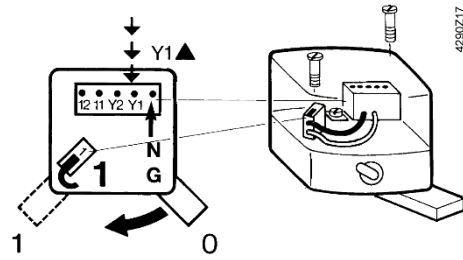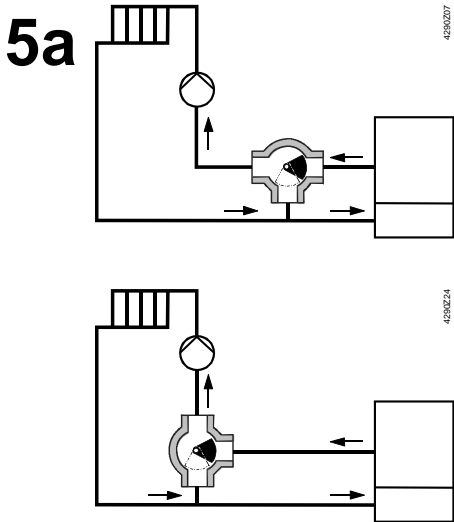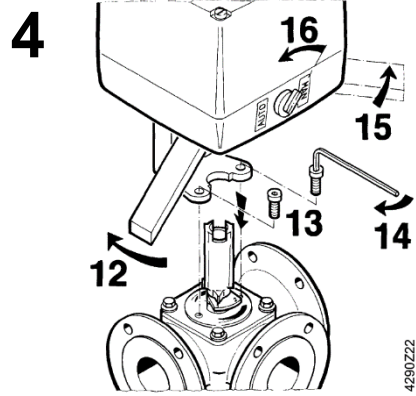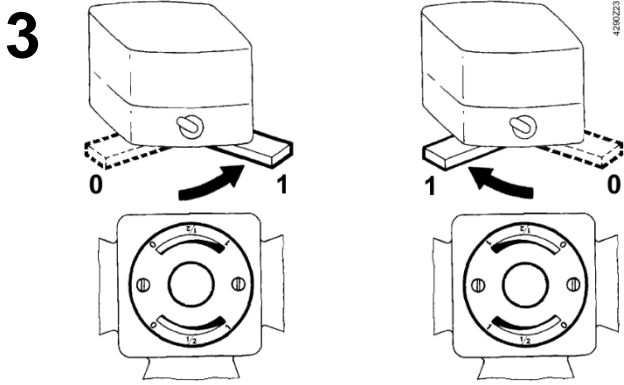

N: SQL33...
G: SQL83...

	11. 12	Y1. Y2	N	G
de	Stellsignal Sequenz	Stellsignal	Neutralleiter	Systempotential
en	Control signal sequence	Control signal	Neutral	System potential
fr	Séquence du signal de positionnement	Signal de commande	Neutre	Potentiel du système
sv	Styrsignal sekvens	Styrsignal	Nolledare	Systempotential
nl	Regelaar volgorde-signaal	Besturings-signaal	Nul	Systeem-potentiaal
it	Controllo segnale di sequenza	Segnale di comando	Neutro	Fase del sistema
fi	Säätöviestien sarja	Ohjausviesti	Nollajohdin	Järjestelmäpotentiaali
es	Señal fin de carrera	Señal de control	Neutro	Fase para equipos
da	Styresignal sekvens	Styre-signal	Nulleder	System-fase
pl	Sygnal sterujący sekwencji	Sygnal sterujący	Przewód zerowy	Potencjał systemowy
cz	Sekvence řídicího signálu	Řídicí signál	Nulový vodič	Systémový potenciál
hu	Vezérlőjel szekvencia	Vezérlőjel	Nulla (N)	Rendszer fázis
el	Τεματική επαφή	Σήμα ελέγχου	Ουδέτερος	Φάση
tr	Kontrol sinyali sekansı	Kontrol sinyali	Nötr	Sistem potansiyeli
zh	控制信号序列	控制信号	电源零线	额定电源